Illustrated Parts Manual

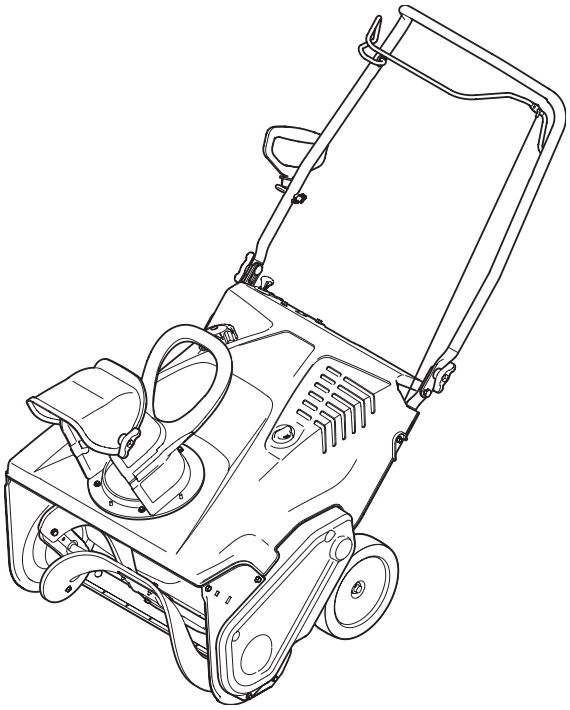

Model 2T5 Shown

Single-Stage Snow Thrower — Models 2M1, 2S1 & 2T5

MTD LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

Printed In USA

Form No. 769-08107
(May 14, 2012)

To The Owner

Thank you for purchasing an MTD Snow Thrower. It was carefully engineered to provide excellent performance when properly operated and maintained.

All information in this manual is relative to the most recent product information available at the time of printing. Please be aware that this Illustrated Part's Manual may cover a range of product specifications for various models.

Components listed and/or illustrated in this manual may not be applicable to all models. We reserve the right to change product specifications, designs and equipment without notice and without incurring obligation.

Throughout this manual, all references to *right* (RH) and *left* (LH) are observed from the operating position.

Table of Contents

Shroud, Chute & Handle 4
Drive System & Auger Assembly 6
Engine Model 161-JWA-12..... 8
Engine Model 265-JU-12 16
Engine 270-JU 24

Record Product Information

To ease in ordering replacement parts, please locate the model plate on the equipment and record the information in the provided area to the right. You can locate the model plate by looking beneath the seat.

Model Number

Serial Number

Painted Parts

When ordering painted service parts, a four digit color suffix must be added to the part number (e.g. 783-XXXXX-0637). Please refer to the table below for current color codes:

0637	Black
0709	Dark Green (Bolens, Yard-Man)
0662	Oyster Gray (MTD Gold)
0638	Red (Yard Machines, Huskee, Troy-Bilt, MTD)
0691	Black Jack (MTD Gold, MasterCut)

0674	Yellow (Yard-Man)
0650	Metallic Red (White Outdoor)
0629	Silver Flake (MTD Platinum)
04038	Day Orange (Daedong)
04033	Flint Mica (Troy-Bilt XP)

This page left intentionally blank.

Shroud, Chute & Handle

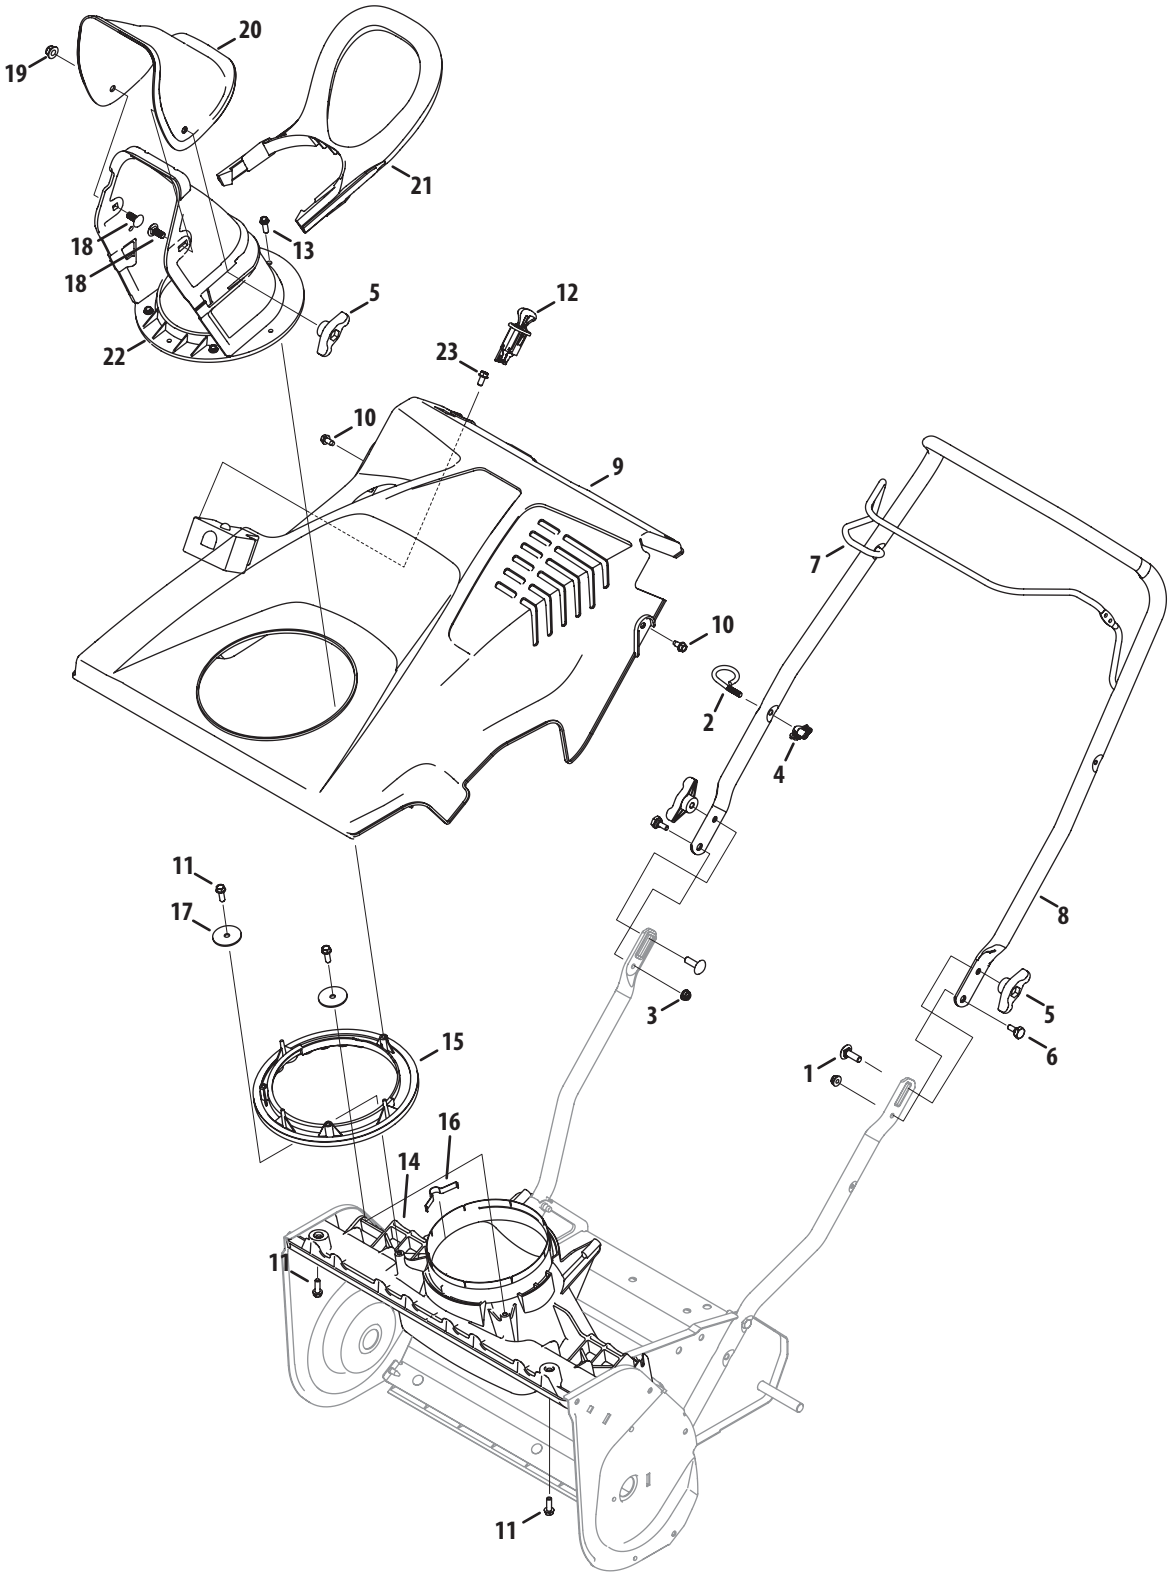

Ref.	Part Number	Description
1.	710-04998	Carriage Bolt, 5/16-18 x 1.00
2.	710-05348	Eye Bolt, 1/4-20
3.	712-04064	Flange Lock Nut, 1/4-20
4.	720-0279	Knob Handle
5.	720-04122	Wing Knob
6.	738-04419A	Shoulder Screw, .375 x .148 x 1/4-20
7.	747-05327C†	Auger Bail
	747-05490A	Auger Bail
8.	749-04703B†	Upper Handle
	749-04808	Upper Handle
9.	753-06902	Top Cover (Black w/o electric start)
	753-06904††	Top Cover (Gray)
	753-06901††	Top Cover (Black)
10.	710-0599	Hex Screw, 1/4-14 x .500
11.	710-0895	Screw, Hi-Lo:1/4-15, 0.75
12.	925-04031A	Ignition Switch Assembly
13.	710-05108	Hex Washer Screw, 1/4 x .750
14.	931-07626B	Chute Adapter
15.	731-08274	Chute Ring
16.	932-04111	Chute Adjustment Spring
17.	736-04576	Flat Washer, .28 x 1.5 x .066
18.	710-0451	Carriage Bolt, 5/16-18 x .750
19.	712-04063	Flange Lock Nut, 5/16-18
20.	731-04426A	Upper Chute
21.	731-07644	Chute Handle
22.	931-07753A	Lower Chute
23.	710-04187††	Hex Washer Screw, 1/4-15 x .50

† Model 2T5
†† Model with electric start

Drive System & Auger Assembly

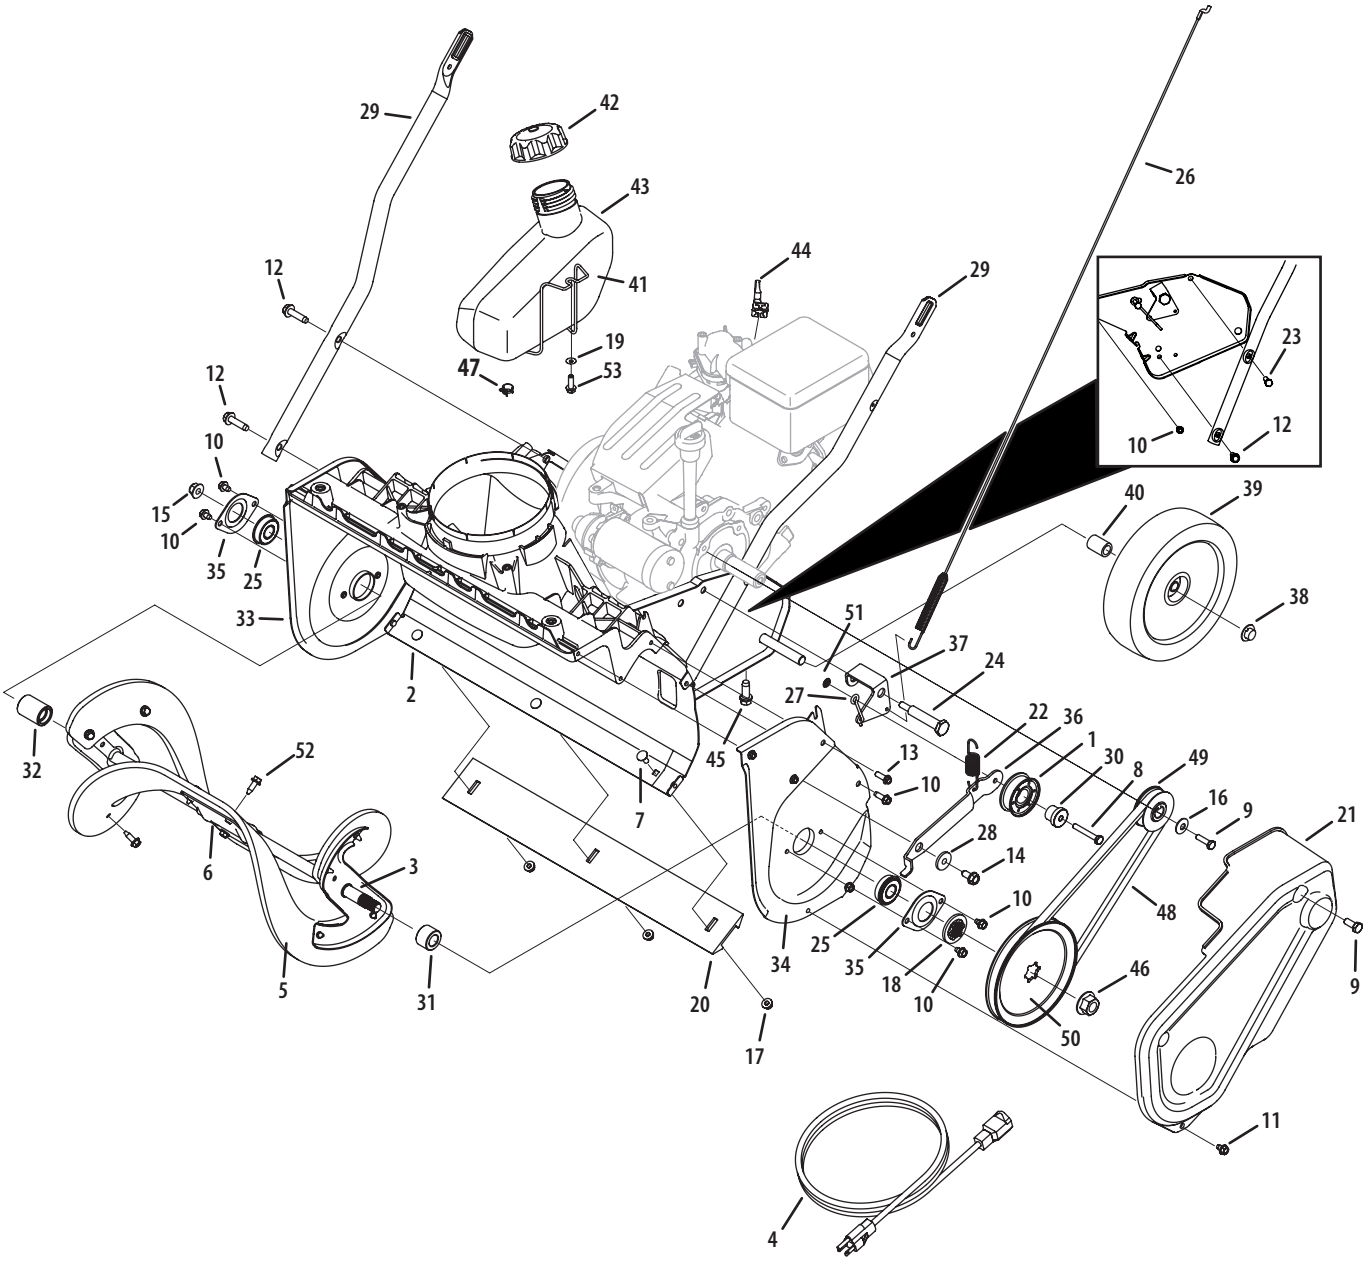

Ref.	Part Number	Description
1	684-04168	Idler Pulley Assembly
2	684-04398	Frame
3	984-04393	Auger Assembly Mount
4	929-0071A*	3-Prong Extension Cord
5	753-06469	Auger Replacement Kit (Inc. 2 Paddles and 12 Hex Washer Screws)
6	790-00427	Center Auger Bracket
7	710-0134	Carriage Screw, 1/4-20 x .62
8	710-0778	Hex Screw, 1/4-20 x 1.50
9	710-0627	Hex Lock Screw, 5/16-24 x .750
10	710-1652	Hex Washer Screw, 1/4-20 x .625
11	710-0599	Hex Washer Screw, 1/4-20 x .500
12	710-0817	Hex Washer Screw, 5/16-18 x 1.250
13	710-0895	Hex Washer Screw, 1/4-15 x .750
14	710-04484	Hex Washer Screw, 5/16-18 x .75
15	712-04065	Flange Lock Nut, 3/8-16
16	736-0343	Thrust Washer, .330 x 1.25 x .120
17	712-04064	Flange Lock Nut, 1/4-20
18	718-04836	Pulley Hub
19	736-3092	Washer, .265 x 1.00 x .030
20	731-08171	Shave Plate
21	731-07737A	Belt Cover
22	732-04748	Extension Spring, .70 x 3.035
23	710-05183	Hex Screw, 5/16-24 x 1.25
24	738-04456	Shoulder Bolt, 5/16-24 x .496 x 2.18
25	741-04517	Ball Bearing, .500 x 40mm x 12mm
26	946-04782	Clutch Cable
27	747-05360A	Drive Cable Wire Support

Ref.	Part Number	Description
28	748-0234	Shoulder Spacer
29	749-04810	Lower Handle
30	750-04571	Shoulder Spacer, .260 x .785 x .538
31	750-04758	LH Auger Spacer
32	750-05393	RH Auger Spacer
33	790-00444	RH Auger Plate
34	790-00445	LH Auger Plate
35	790-00457	Bearing Cup
36	790-00461	Idler Bracket
37	790-00426	Cable Idler Bracket
38	726-0299	Push Cap, 1/2
39	734-04585	Wheel, 8″
	734-04063A	Wheel, 7″
40	750-04432	Spacer, .525 x .775 x .835
41	747-05513	Gas Tank Wire Support
42	751-14006	Fuel Cap
43	751-14001	Fuel Tank
44	731-07664*	Choke Extension Lever
45	710-0654A	Hex Washer Screw, 3/8-16 x 1.000
46	912-0702	Flange Nut, 7/16-20
47	726-0205	Hose Clamp
48	954-04050	Belt, .500 x 35.06
49	956-0416B	Pulley Half, .625 x 2.25
50	756-04443	Pulley, 1/2 x 6.00
51	726-0233	Push Nut
52	710-05058	Hex Washer Screw, 1/4-20 x .750
53	710-04065	Screw, 1/4-10 x .625

* Models with electric start

161-JWA-12 Muffler

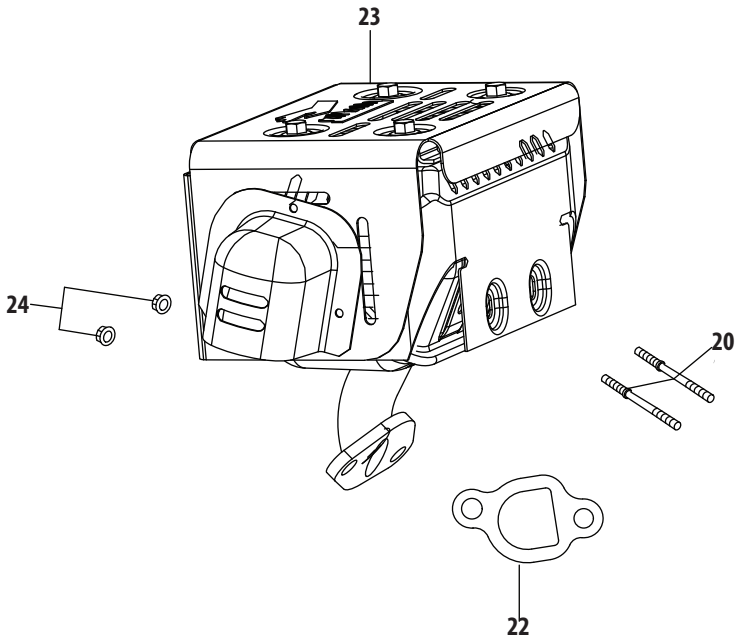

Ref.	Part Number	Description
20	710-04911	Stud, M8×34, Exhaust
20	951-10657	Muffler Stud Assembly
22	951-10959	Muffler Gasket
23	951-10901	Muffler
24	712-04214	Nut, M8

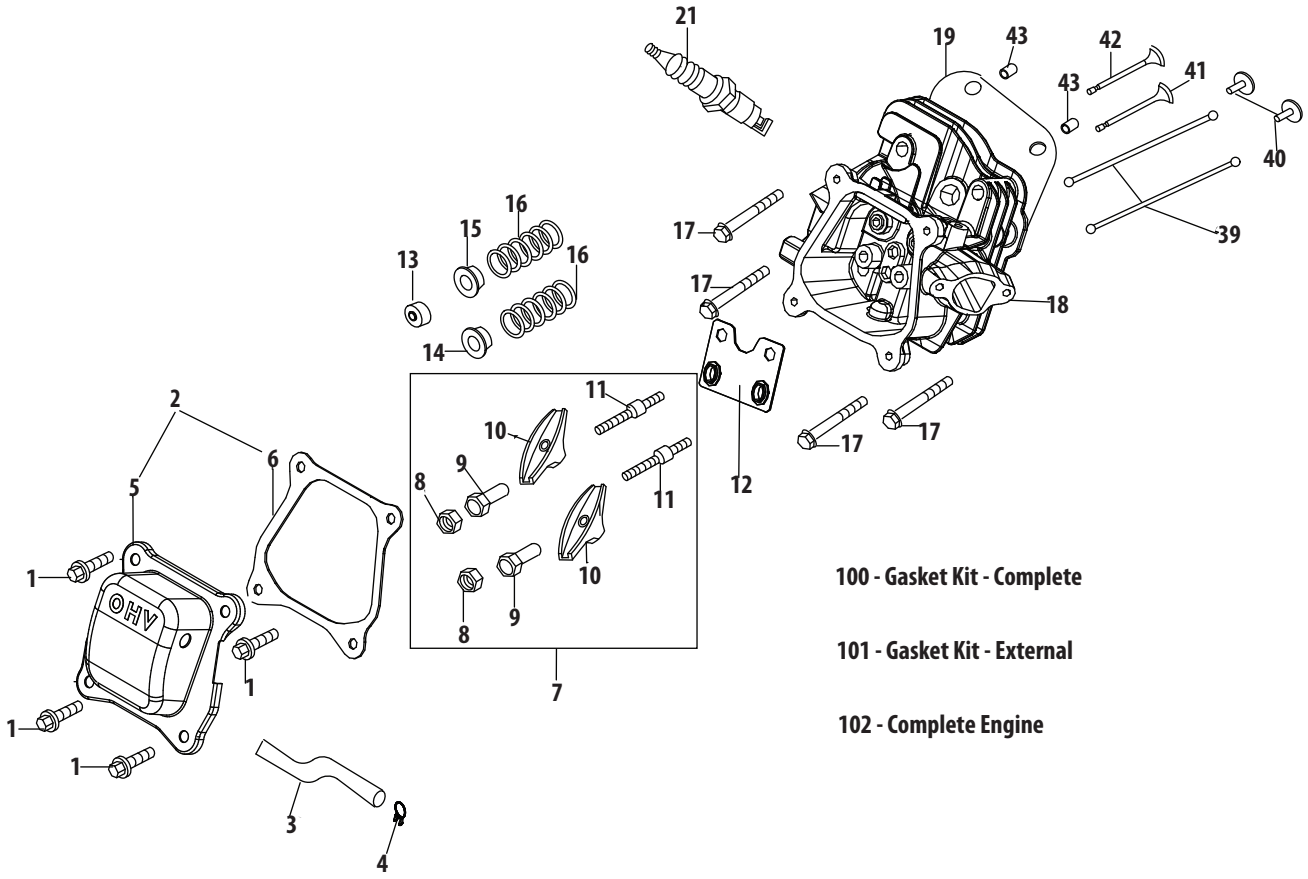

Ref.	Part Number	Description
1	710-04968	Bolt m6×16
2	951-12626	Valve Cover Kit
3	731-07059	Breather Hose
4	726-04101	Breather Hose Clamp
5	951-12608	Valve Cover
6	951-11565	Valve Cover Gasket
7	951-11892	Rocker Arm Assembly
8	751-11124	Nut, Pivot Lock
9	751-11123	Adjusting Nut ,Valve
10	951-11893	Rocker Arm
11	710-04902	Bolt, Pivot
12	951-11687	Plate, Push Rod Guide
13	951-12002	Exhaust Lash Cap
14	951-12000	Valve Spring Retainer (Intake)
15	951-12003	Valve Spring Retainer (Exhaust)
16	951-12004	Valve Spring
17	710-04922	Bolt, Flange, 8×50

Ref.	Part Number	Description
18	951-12628A	Cylinder Head Assembly (Incl. 6,10,12-16,18,19, 22,26-28,41-43)
19	951-12609	Gasket, Cylinder Head
21	951-10292	Spark Plug/F6Rtc
39	951-12614	Push Rod Kit
40	951-11899	Tappet
41	951-10912	Valve Kit
42	951-10912	Valve Kit
43	715-04108	Pin, Dowel, 10×16
100	951-12624A	Gasket Kit - Complete (Incl. 6,22,26,28,34,50, 51,59,63,65,69)
101	951-12625A	Gasket Kit - External (Incl. 6,22,26,28,34,63)
102	952Z161-JWA-12	Complete Engine

161-JWA-12 Crankcase

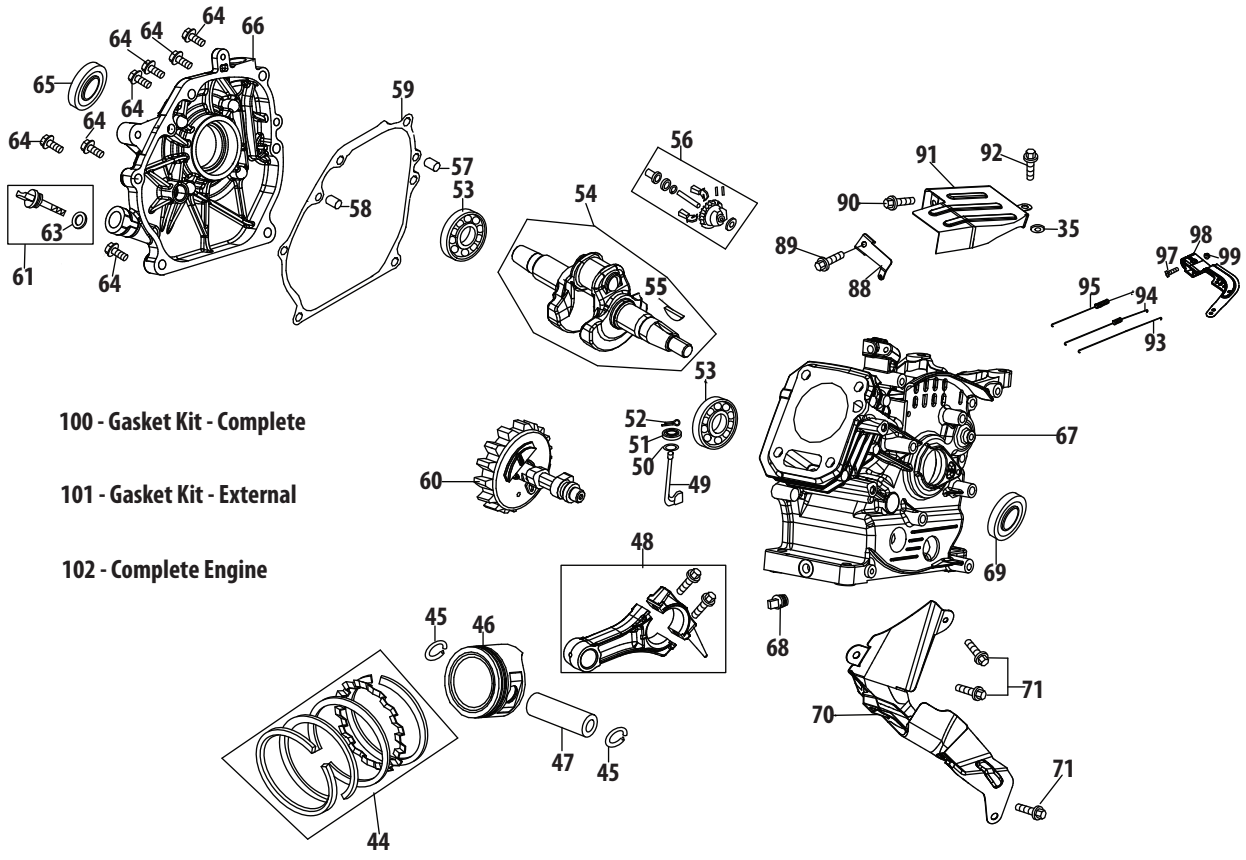

100 - Gasket Kit - Complete

101 - Gasket Kit - External

102 - Complete Engine

Ref.	Part Number	Description
35	712-05015	Nut M6
44	951-12615	Piston Ring Set
45	951-11603	Clip, Piston Pin, 18Mm
46	951-11828	Piston
47	951-11604	Pin, Piston
48	951-12616	Connecting Rod
49	951-11356	Governor Arm
50	736-04461	Washer 5.2×1.9
51	951-11902	Governor Seal
52	714-04078	Pin, Lock
53	951-11369	Radial Ball Bearing, 6205
54	951-11096	Crankshaft Kit
		(Incl. 53-55)
55	951-10307	Woodruff Key
56	951-12617	Governor Gear Assembly
57	715-04096	Dowel Pin 9×14
58	715-04092	Dowel Pin 7×14
59	951-12618	Gasket, Crankcase Cover
60	951-12046	Camshaft Assembly
61	951-12619	Dipstick Assembly
63	951-11577	O-Ring 15.8×2.5
64	710-04943	Bolt M6×28
65	951-11368	Oil Seal, 25×41.25×6
66	951-12620	Crankcase Cover Kit
		(Incl. 53,59,61-66)

Ref.	Part Number	Description
67	951-12621	Crankcase Kit
		(Incl. 53,57,65,67,69)
	951-12627A	Short Block Assembly
		(Incl. 6,19,22,26-28,40,44-69)
68	951-12514	Oil Drain Plug
69	951-12622	Oil Seal
70	951-11105	Baffle, Cylinder
71	710-04940	Bolt, Flange, 6×10
88	951-11104	Governor Spring Bracket
89	710-04916	Bolt m6×14
90	710-04921	Bolt, Flange, 8×14
91	951-11103	Governor Shield
92	710-04943	Bolt, Flange, M6×28
93	951-11152	Rod, Governor
94	951-10954	Throttle Return Spring
95	951-10953	Spring, Governor
97	710-04908	Bolt, Governor Arm
98	951-11106	Arm, Governor
99	712-04212	Nut, Flange, 6Mm
100	951-12624A	Gasket Kit - Complete
		(Incl. 6,22,26,28,34,50,
		51,59,63,65,69)
101	951-12625A	Gasket Kit - External
		(Incl. 6,22,26,28,34,63)
102	952Z161-JWA-12	Complete Engine

161-JWA-12 Carburetor

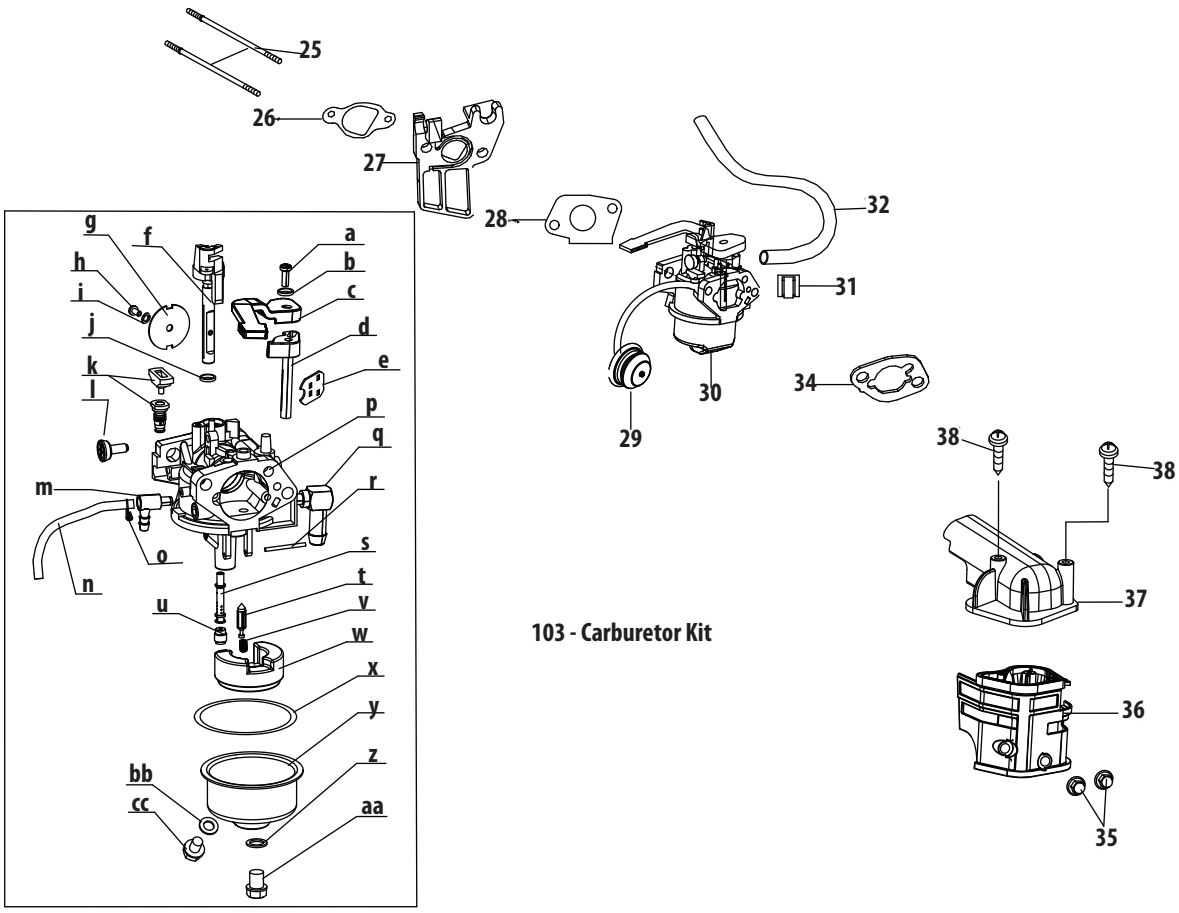

103 - Carburetor Kit

Ref.	Part Number	Description
25	710-04909	Stud, M6×113, Intake
26	951-12610	Gasket, Port, Intake
27	951-12611	Insulator, Carburator
28	951-11569A	Carburetor Gasket
29	951-10639A	Primer Assembly
29	951-11824	Primer Bulb
30	951-14093	Carburetor Assembly
31	951-11700	Fuel Hose Clamp
32	951-12613	Fuel Hose
34	951-11571	Carburetor Gasket Plate
35	712-05015	Nut M6
36	951-10962	Air Cleaner Housing
37	951-10961	Air Cleaner Assembly
38	710-05275	Self-Tapping Bolt M4.2×45
103	951-14124	Carburetor Kit
		(Incl. k,r,s,t,u,v,w,x,z,bb)
a	710-05468	Choke Control Lever Screw
b	736-04598	Washer 3
c	951-12515	Choke Control Lever
d	n/a	Choke Shaft
e	n/a	Choke Plate
f	n/a	Throttle Shaft
g	n/a	Throttle Plate

Ref.	Part Number	Description
h	710-05469	Bolt M3×6
i	736-04638	Washer 3
j	n/a	Gasket, Throttle Plate
k	n/a	Idle Jet Assembly(0.34)
l	n/a	Idle Speed Adjusting Screw
m	n/a	Primer Pipe
n	951-12019	Primer Hose
o	951-11906	Hose Clamp
p	n/a	Carburetor Body
q	n/a	Inlet Tube Assembly
r	n/a	Float Pin
s	n/a	Emulsion Tube
t	951-12875	Needle Valve
u	n/a	Main Jet(#73H)
v	n/a	Needle Valve Spring
w	n/a	Float
x	951-11589	Fuel Bowl O-Ring
y	n/a	Fuel Bowl
z	951-11348	Fuel Bowl Mounting Bolt Gasket
aa	710-04945	Fuel Bowl Mounting Bolt
bb	951-11349	Fuel Drain Bolt Gasket
cc	710-04938	Fuel Drain Bolt

161-JWA-12 Flywheel & Recoil Starter

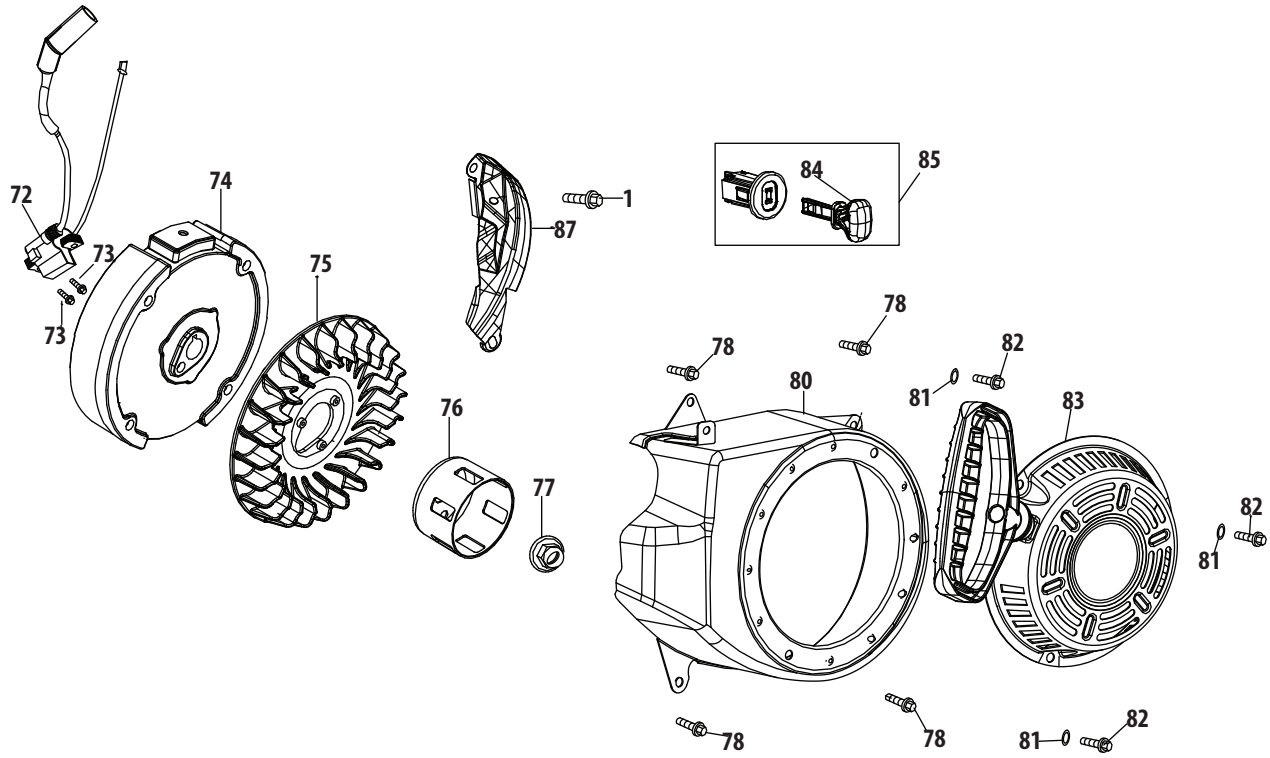

Ref.	Part Number	Description
1	710-04968	Bolt m6×16
72	951-10958A	Ignition Module
73	710-04919	Bolt M6×25
74	951-10908	Flywheel
75	951-10910	Cooling Fan
76	951-10911	Starter Cup
77	712-04209	Flywheel Nut, M14×1.5
78	710-04916	Bolt m6×14
80	951-11107	Blower Housing
81	736-04455	Gasket 6
82	710-04974	Bolt M6×10
83	951-10955	Starter, Recoil
84	731-05632	Key
85	951-10637	Key Switch Base
87	951-11102	Flywheel Baffle

265-JU-12 Muffler

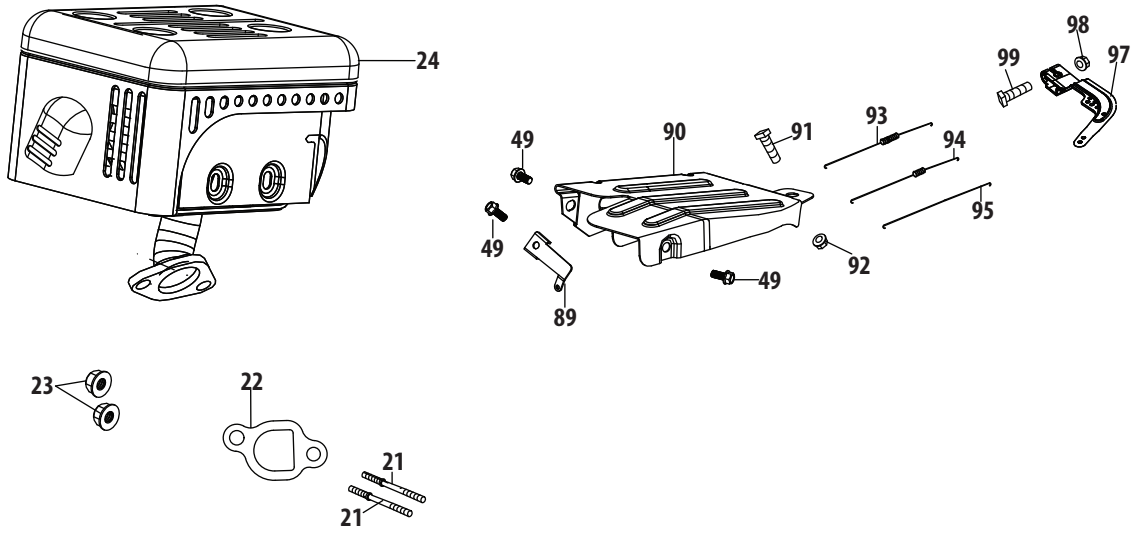

Ref.	Part Number	Description
21	710-04911	Stud M8×36
21	951-10657	Muffler Stud Assembly
22	951-11289	Exhaust Pipe Gasket
23	712-04214	Nut, M8
24	951-12010	Muffler Assembly
49	710-04915	Bolt M6×12
89	951-11104	Covernor Spring Bracket
90	951-12016	Governor Shield

Ref.	Part Number	Description
91	710-04943	Bolt M6×28
92	712-05015	Nut M6
93	951-12100	Governor Spring
94	951-10664	Throttle Linkage Spring
95	951-10665	Throttle Linkage
97	951-11106	Governor Arm
98	712-04212	Nut M6
99	710-04908	Governor Arm Bolt

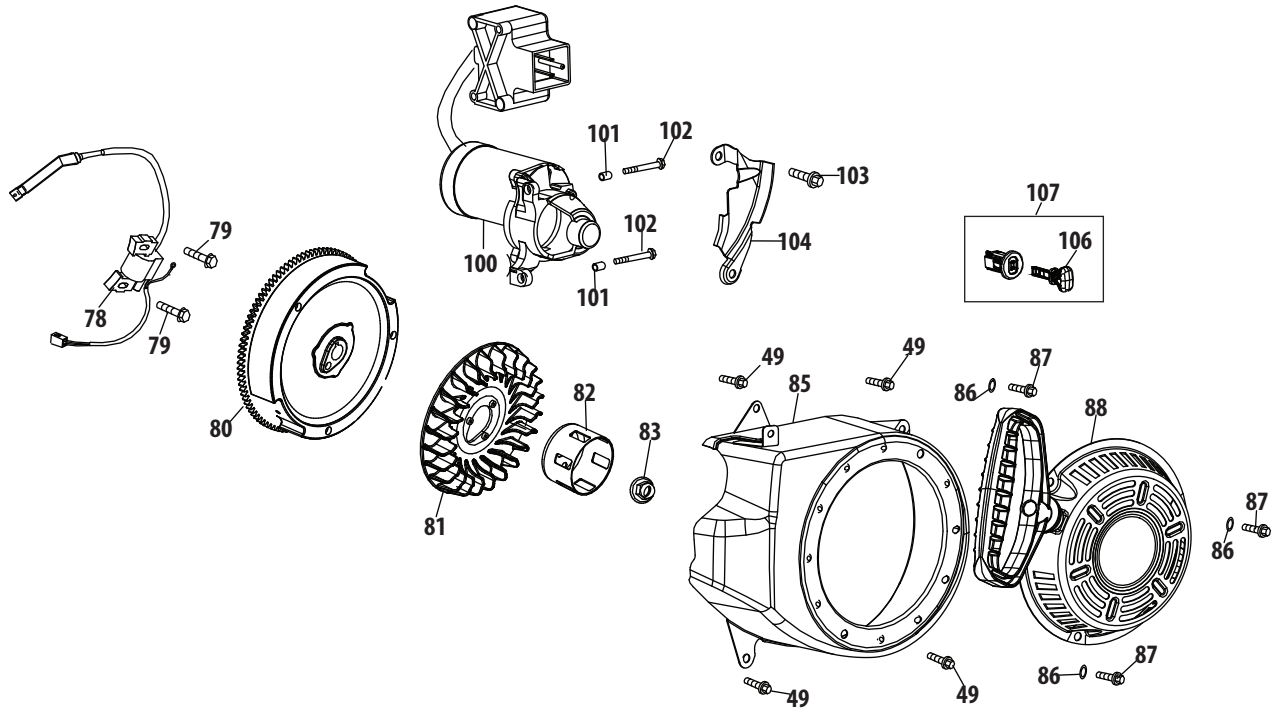

Ref.	Part Number	Description
49	710-04915	Bolt M6×12
78	951-12013	Ignition Coil Assembly
79	710-04919	Bolt M6×25
80	951-12416	Flywheel
81	951-10934	Cooling Fan
82	951-10911	Starter Cup
83	712-04209	Nut, Special, M14×1.5
85	951-12644	Blower Housing
86	736-04455	Gasket 6

Ref.	Part Number	Description
87	710-04974	Bolt M6×10
88	951-14152	Recoil Starter
100	951-10645A	Electric Starter
101	715-04088	Dowel Pin 8×8
102	710-05182	Bolt M6×32
103	710-04915	Bolt M6×12
104	951-11109	Blower Housing Shield
106	731-05632	Key
107	951-10637	Key Switch

265-JU-12 Crankcase

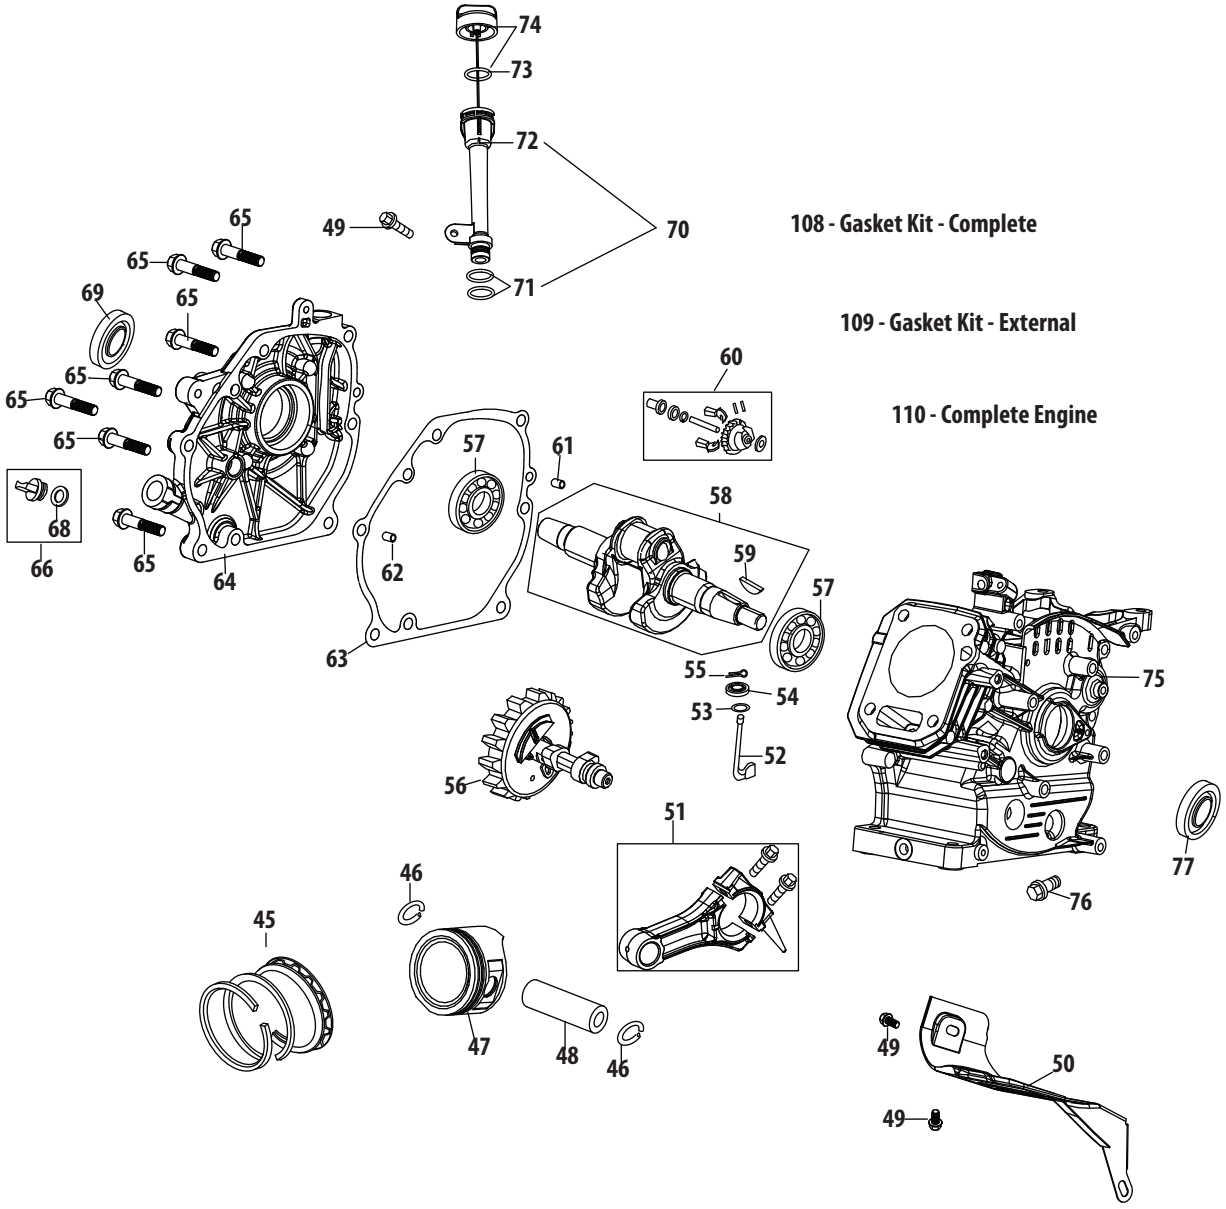

108 - Gasket Kit - Complete

109 - Gasket Kit - External

110 - Complete Engine

Ref.	Part Number	Description
45	951-11688	Piston Ring Set
46	951-11632	Piston Pin Snap Ring
47	951-11900	Piston
48	951-11901	Piston Pin
49	710-04915	Bolt M6×12
50	951-11113	Air Shield
51	951-11573	Connecting Rod Assembly
52	951-14053	Governor Arm Shaft
53	736-04461	Washer 5.2×1.9
54	951-11902	Governor Seal
55	714-04078	Cotter Pin
56	951-11575	Camshaft Assembly
57	951-11369	Radial Ball Bearing, 6205
58	951-12102	Crankshaft Kit
		(Incl. 57-59,69,77)
59	951-10307	Woodruff Key
60	951-11576	Governor Gear/Shaft Assembly
61	715-04092	Dowel Pin 7×14
62	715-04096	Dowel Pin 9×14
63	951-11371	Crankcase Cover Gasket
64	951-12125	Crankcase Cover
	951-11246	Crankcase Cover Kit
		(Incl. 57,63-69)

Ref.	Part Number	Description
65	710-04932	Bolt M8×32
66	951-11283	Oil Filler Plug Assembly
68	951-11577	O-Ring 15.8×2.5
69	951-11368	Oil Seal, 25×41.25×6
70	951-11913	Oil Fill Tube Assembly
71	951-11381	Oil Fill Tube O-Ring
72	951-10656	Oil Fill Tube
73	951-11904	Oil Fill Tube O-Ring
74	951-12482	Dipstick Assembly
75	951-12650	Crankcase Kit
		(Incl. 54,57,69,75,77)
	951-12648	Short Block Assembly
		(Incl.6,22,26-28,39,41,42,
		45-48,51-69,75-77)
76	951-12514	Oil Drain Plug
77	951-11370	Oil Seal 25×41.25×6
108	951-12028	Gasket Kit - Complete
		(Incl. 6,22,26-28,34,39,
		53,54,63,69,77)
109	951-12026A	Gasket Kit - External
		(Incl. 6,22,26-28,34)
110	952Z265-JU-12	Complete Engine

265-JU-12 Cylinder Head

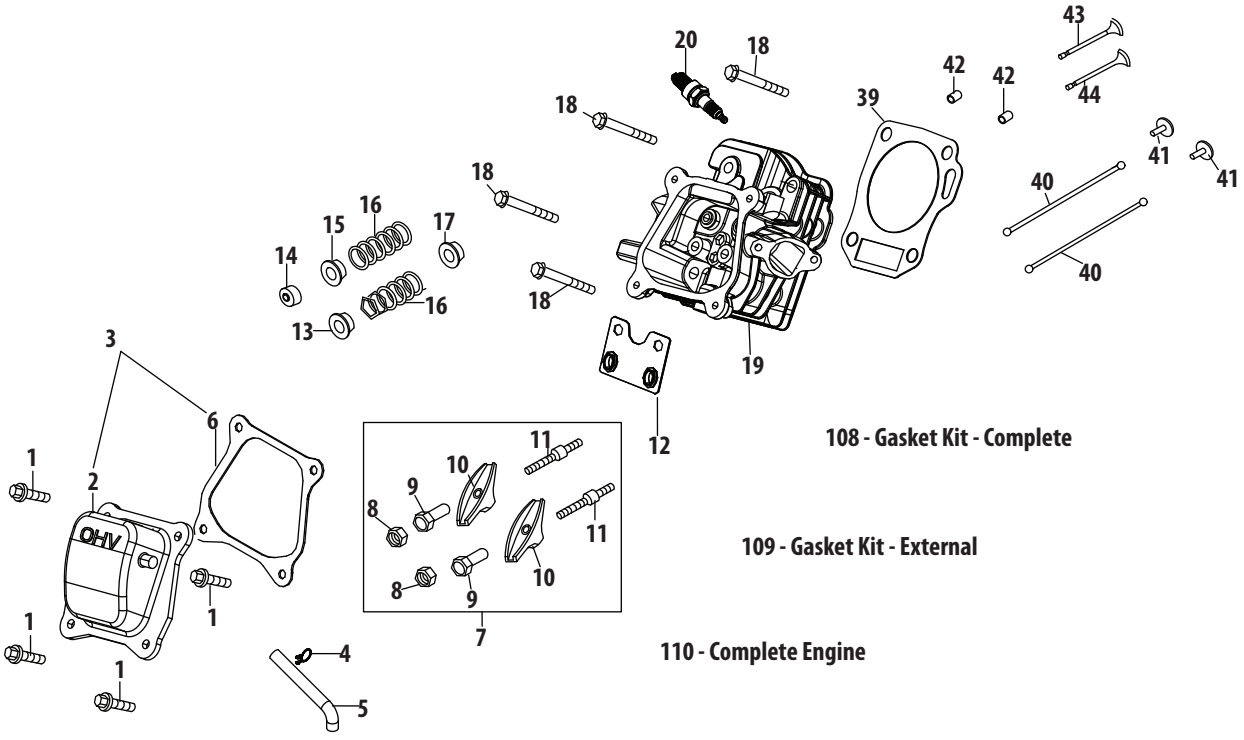

Ref.	Part Number	Description
1	710-04968	Bolt M6×16
2	951-11054A	Valve Cover
3	951-12626	Valve Cover Kit
4	726-04101	Breather Hose Clamp
5	731-07059	Breather Hose
6	951-11565	Valve Cover Gasket
7	951-11892	Rocker Arm Assembly
8	751-11124	Nut, Pivot Locking
9	751-11123	Adjusting Nut ,Valve
10	951-11893	Rocker Arm
11	710-04902	Bolt, Pivot
12	951-11895	Push Rod Guide
13	951-12000	Valve Spring Retainer (Intake)
14	951-12002	Exhaust Lash Cap
15	951-12003	Valve Spring Retainer (Exhaust)
16	951-12004	Valve Spring
17	951-11894	Valve Seal (Intake)
18	710-04933	Bolt M8×55
19	951-14195	Cylinder Head Assembly (Incl. 6-17,19,22,26,28,39,43,44)
20	951-10292	Spark Plug
39	951-11898	Gasket, Cylinder Head
40	951-10648	Push Rod Kit
41	951-11899	Tappet
42	715-04108	Dowel Pin 10×16
43	951-10647A	Valve Kit
44	951-10647A	Valve Kit
108	951-12028	Gasket Kit - Complete (Incl. 6,22,26-28,34,39, 53,54,63,69,77)
109	951-12026A	Gasket Kit - External (Incl. 6,22,26-28,34)
110	952Z265-JU-12	Complete Engine

265-JU-12 Carburetor

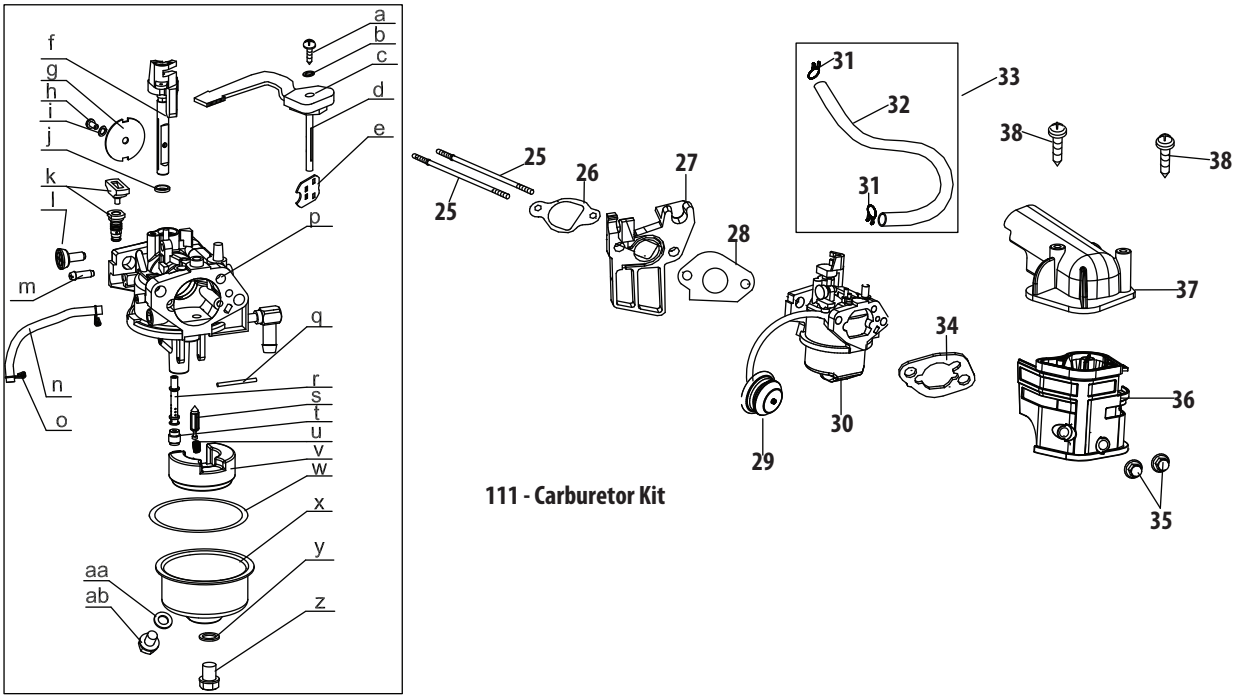

111 - Carburetor Kit

Ref.	Part Number	Description
25	710-05101	Stud M6×110
26	951-11567	Carburetor Insulator Gasket
27	951-11568	Carburetor Insulator
28	951-11569A	Carburetor Gasket
29	951-10639A	Primer Assembly
29	951-11824	Primer Bulb
30	951-12704B	Carburetor Assembly
31	951-11700	Fuel Hose Clamp
32	951-12613	Fuel Hose
33	951-12012	Fuel Line Kit
34	951-11571	Carburetor Gasket Plate
35	712-04213	Nut
36	951-10962	Air Cleaner Housing
37	951-10961	Air Cleaner Assembly
38	710-05275	Self-Tapping Bolt M4.2×45
111	951-14033	Carburetor Kit
		(Incl. k,q,r,s,t,u,v,w,y,aa)
a	710-05468	Choke Control Lever Screw
b	736-04598	Washer
c	951-12515	Choke Control Lever
d	n/a	Choke Shaft
e	n/a	Choke Plate
f	n/a	Throttle Shaft

Ref.	Part Number	Description
g	n/a	Throttle Plate
h	710-05469	Screw M3×6
i	736-04638	Lock Washer
j	n/a	Gasket, Throttle Plate
k	n/a	Idle Jet Assembly (0.34)
l	n/a	Idle Speed Adjusting Screw
m	n/a	Primer Pipe
n	951-12019	Primer Hose
o	951-11906	Hose Clamp
p	n/a	Carburetor Body
q	n/a	Float Pin
r	n/a	Emulsion Tube (P18-019)
s	951-12875	Needle Valve
t	n/a	Main Jet (#73H)
u	n/a	Needle Valve Spring
v	n/a	Float
w	951-11589	Fuel Bowl O-Ring
x	n/a	Fuel Bowl
y	951-11348	Fuel Bowl Mounting Bolt Gasket
z	710-04945	Fuel Bowl Mounting Bolt
aa	951-11349	Fuel Drain Bolt Gasket
ab	710-04938	Fuel Drain Bolt

270-JU Muffler

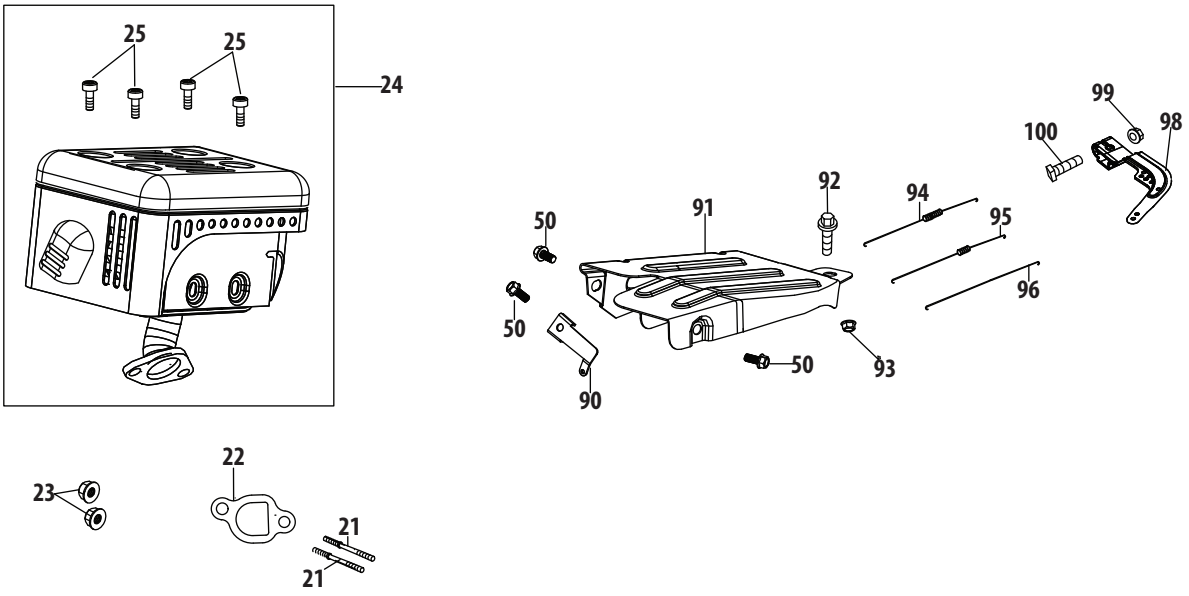

Ref.	Part Number	Description
21	710-04911	Stud M8×36
21	951-12027	Muffler Stud Assembly
22	951-11285	Muffler Gasket
23	712-04214	Nut, M8
24	951-12010	Muffler Assembly
25	710-05002	Bolt M5×10
50	710-04915	Bolt M6×12
90	951-11104	Covernor Spring Bracket
91	951-12016	Governor Shield

Ref.	Part Number	Description
92	710-04920	Bolt M6×28
93	712-04212	Nut M6
94	951-12100	Governor Spring
95	951-10664	Throttle Linkage Spring
96	951-10665	Throttle Linkage
98	951-11106	Governor Arm
99	712-04212	Nut M6
100	710-04908	Governor Arm Bolt

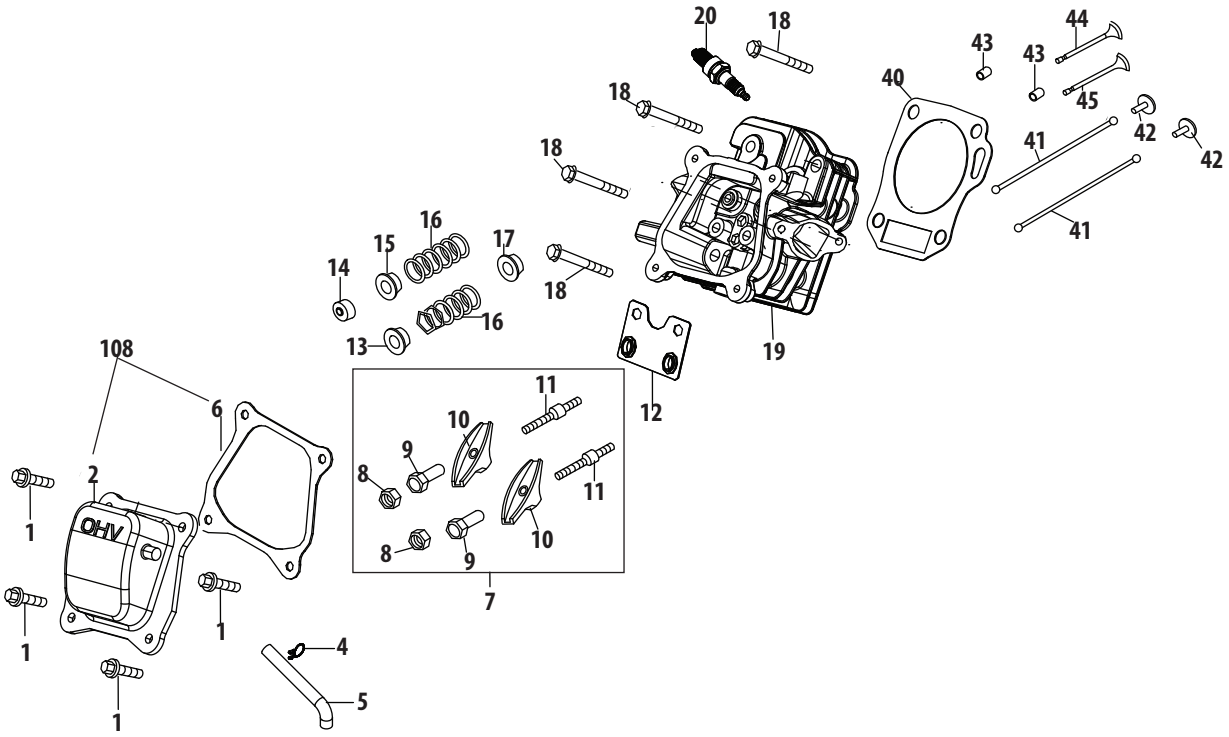

Ref.	Part Number	Description
1	710-04968	Bolt M6×16
2	951-11054	Valve Cover
4	726-04101	Breather Hose Clamp
5	731-07059	Breather Hose
6	951-11565	Valve Cover Gasket
7	951-11892	Rocker Arm Assembly
8	751-11124	Nut, Pivot Locking
9	751-11123	Adjusting Nut ,Valve
10	951-11893	Rocker Arm
11	710-04902	Bolt, Pivot
12	951-11895	Push Rod Guide
13	951-12000	Retainer, In.Valve Spring
14	951-12002	Adjuster, Exh Valve
15	951-12003	Retainer, Ex.Valve Spring
16	951-12004	Valve Spring
17	951-11894	Intake Valve Seal
18	710-04933	Bolt M8×55
19	951-10668A	Cylinder Head

Ref.	Part Number	Description
		(Incl.6,8-17,19,22,27,28,40,44,45)
20	951-10292	Spark Plug/F6Rtc
40	951-11572	Gasket, Cylinder Head
41	951-10648	Push Rod Kit
42	951-11899	Tappet
43	715-04090	Dowel Pin 10×16
44	951-10647A	Valve Kit
45	951-10647A	Valve Kit
108	951-11063	Valve Cover Kit
	952Z270-JU	Complete Engine
	951-12026	Gasket Kit - External
		(Incl.6,22,27-29,35)
	951-12121	Gasket Kit - Complete
		(Incl.6,22,27-29,35,40,
		54,55,64,70,78)
	751-12513	Short Block
		(Incl.6,22,27,28,40,42,43,46-49,
		52,53,56-59,61-66,68-70,76-78)

270-JU Crankcase

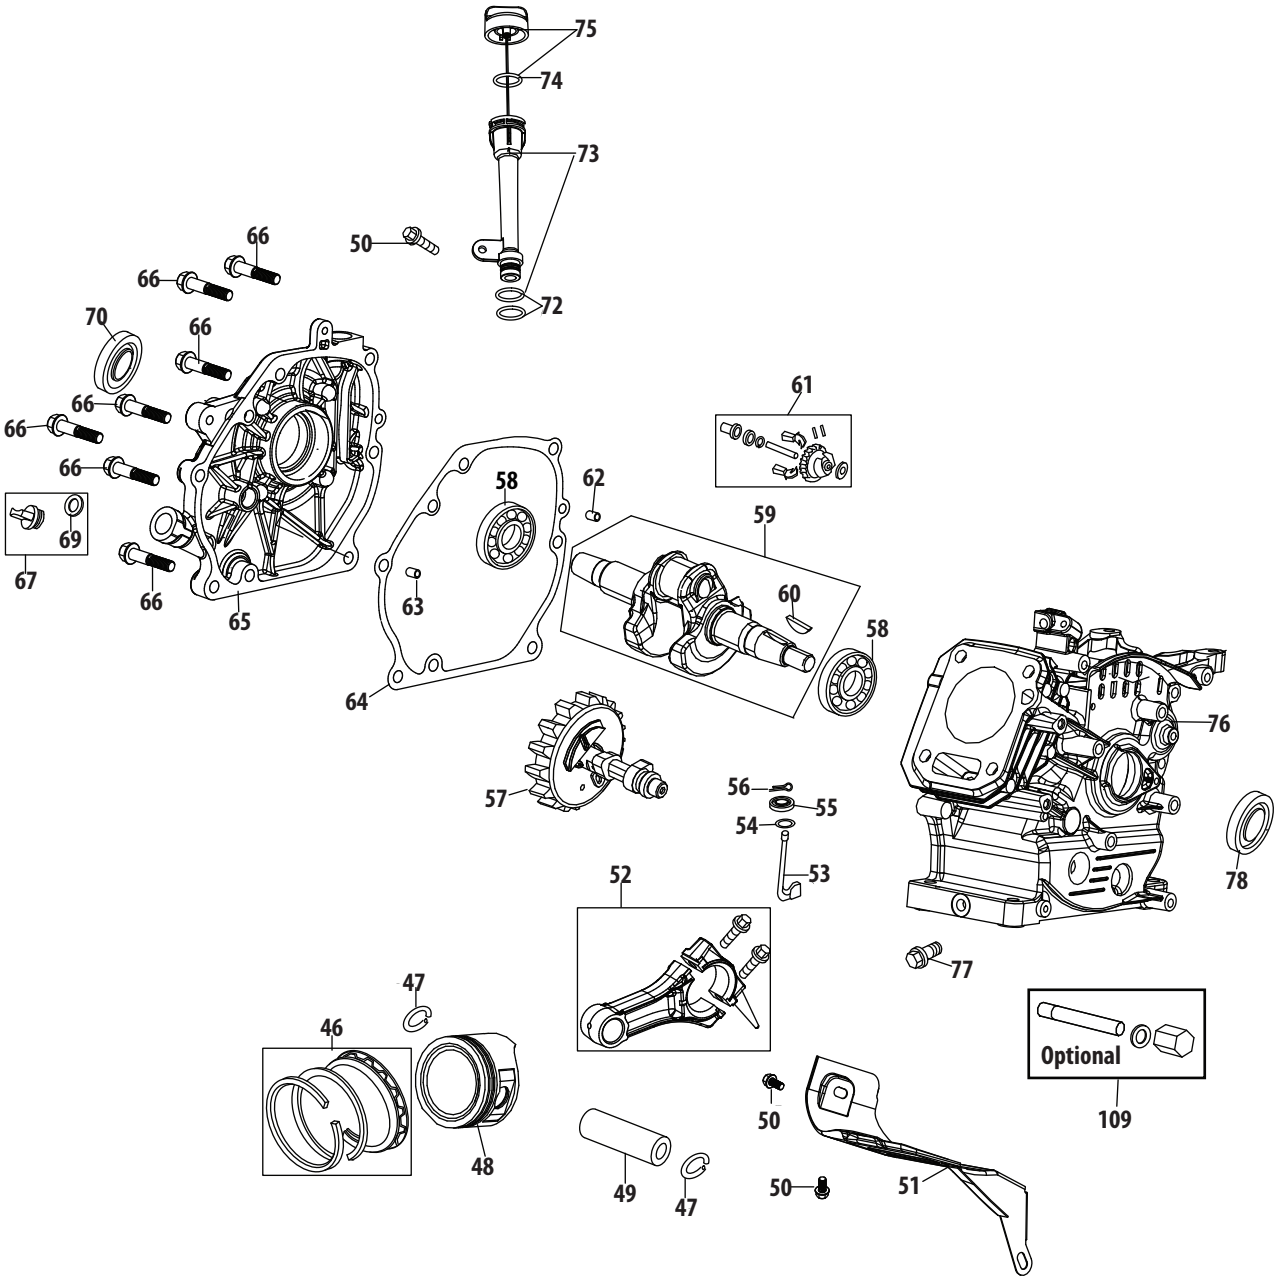

Ref.	Part Number	Description
46	951-12111	Piston Ring Set
47	951-11632	Piston Pin Snap Ring
48	951-12007	Piston
49	951-11633	Piston Pin
50	710-04915	Bolt M6×12
51	951-11113	Air Shield
52	951-11573	Connecting Rod Assembly
53	951-11356	Governor Arm Shaft
54	736-04461	Washer 5.2×1.9
55	951-11902	Governor Seal
56	714-04074	Cotter Pin
57	951-11575	Camshaft Assy.
58	951-11369	Radial Ball Bearing, 6205
59	951-12102	Crankshaft Kit
		(Incl.59-60,70-78)
60	951-10307	Woodruff Key
61	951-11576	Governor Gear/Shaft Assembly
62	715-04092	Dowel Pin 7×14
63	715-04089	Dowel Pin 9×14
64	951-11371	Crankcase Cover Gasket
65	951-12125	Cover Comp, Left Crankcase
66	710-04932	Bolt M8×32
67	951-11283	Oil Fill Plug Assembly

Ref.	Part Number	Description
69	951-11577	O-Ring 15.8×2.5
70	951-11368	Oil Seal, 25×41.25×6
72	951-11381	Oil Fill Tube O-Ring
73	951-11913	Oil Fill Tube Assembly
74	951-11904	Oil Fill Tube O-Ring
75	951-12482	Dipstick Assembly
76	951-12103	Crankcase Kit
		(Incl.55,58,70,76,78)
77	951-12514	Oil Drain Plug
78	951-11370	Oil Seal 25×41.25×6
109	753-06684	Oil Drain Tube Kit - Optional
	952Z270-JU	Complete Engine
	951-11246	Crankcase Cover Kit
		(Incl.58,64-66,68-70)
	951-12026	Gasket Kit - External
		(Incl.6,22,27-29,35)
	951-12121	Gasket Kit - Complete
		(Incl.6,22,27-29,35,40,
		54,55,64,70,78)
	751-12513	Short Block
		(Incl.6,22,27,28,40,42,43,46-49,
		52,53,56-59,61-66,68-70,76-78)

270-JU Carburetor

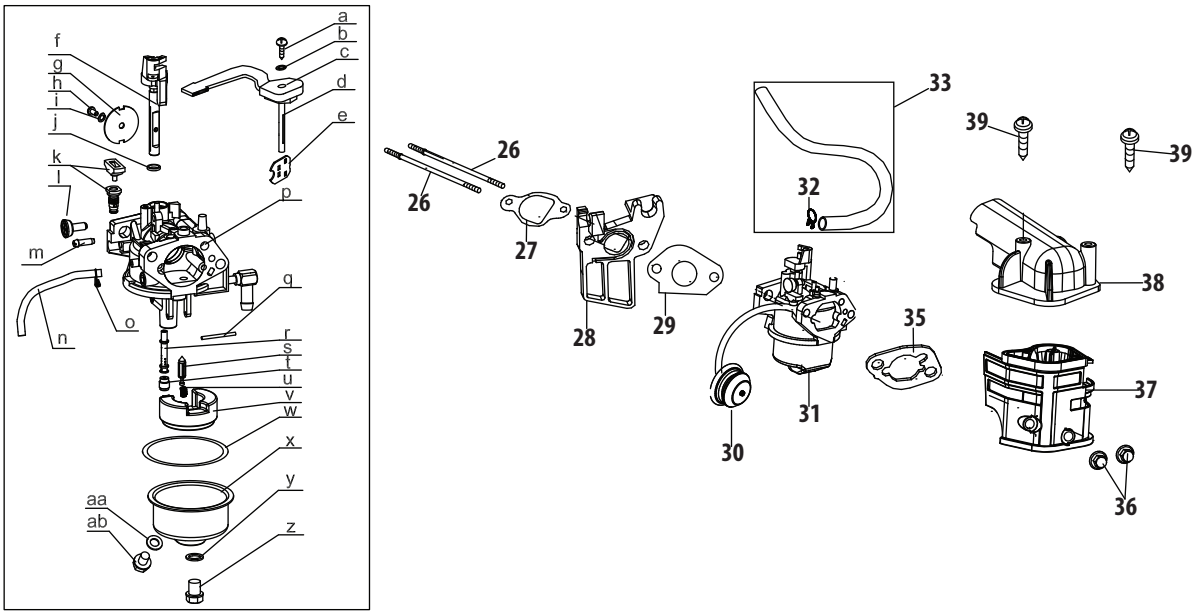

Ref.	Part Number	Description
26	710-05101	Stud M6×110
27	951-11567	Carburetor Insulator Gasket
28	951-11568	Carburetor Insulator
29	951-11569A	Carburetor Gasket
30	951-10639A	Primer Assembly
30	951-11824	Primer Bulb
31	951-12098	Carburetor Assembly
32	951-11700	Fuel Hose Clamp
33	951-12012	Fuel Line Kit
35	951-11571	Carburetor Gasket Plate
36	712-04213	Nut
37	951-10962	Air Cleaner Housing
38	951-10961	Air Cleaner Assembly
39	710-05275	Self-Tapping Bolt M4.2×16
a	710-05369	Screw M3×5
b	736-04598	Washer
c	751-12515	Control Lever,Choke
d	n/a	Choke Shaft
e	n/a	Choke Plate
f	n/a	Throttle Shaft
g	n/a	Throttle Plate
h	n/a	Screw M3×5

Ref.	Part Number	Description
i	n/a	Lock Washer
j	n/a	Idle Jet Assembly
k	n/a	Gasket, Throttle Plate
l	n/a	Idle Speed Adjusting Screw
m	n/a	Mixture Screw
n	951-12019	Primer Hose
o	951-11906	Hose Clamp
p	n/a	Carburetor Body
q	n/a	Float Pin
r	n/a	Emulsion Tube
s	n/a	Needle Valve
t	n/a	Main Jet
u	n/a	Needle Valve Spring
v	n/a	Float
w	951-11589	Fuel Bowl Gasket
x	n/a	Fuel Bowl
y	951-11348	Fuel Bowl Gasket
z	710-04945	Fuel Bowl Mounting Bolt
aa	951-11349	Fuel Drain Plug Gasket
ab	710-04938	Fuel Drain Plug
	951-11021A	Carburetor Kit - Major
		(Incl.aa,j,k,l,q,r,s,t,u,v,w,y)

270-JU Starter & Flywheel

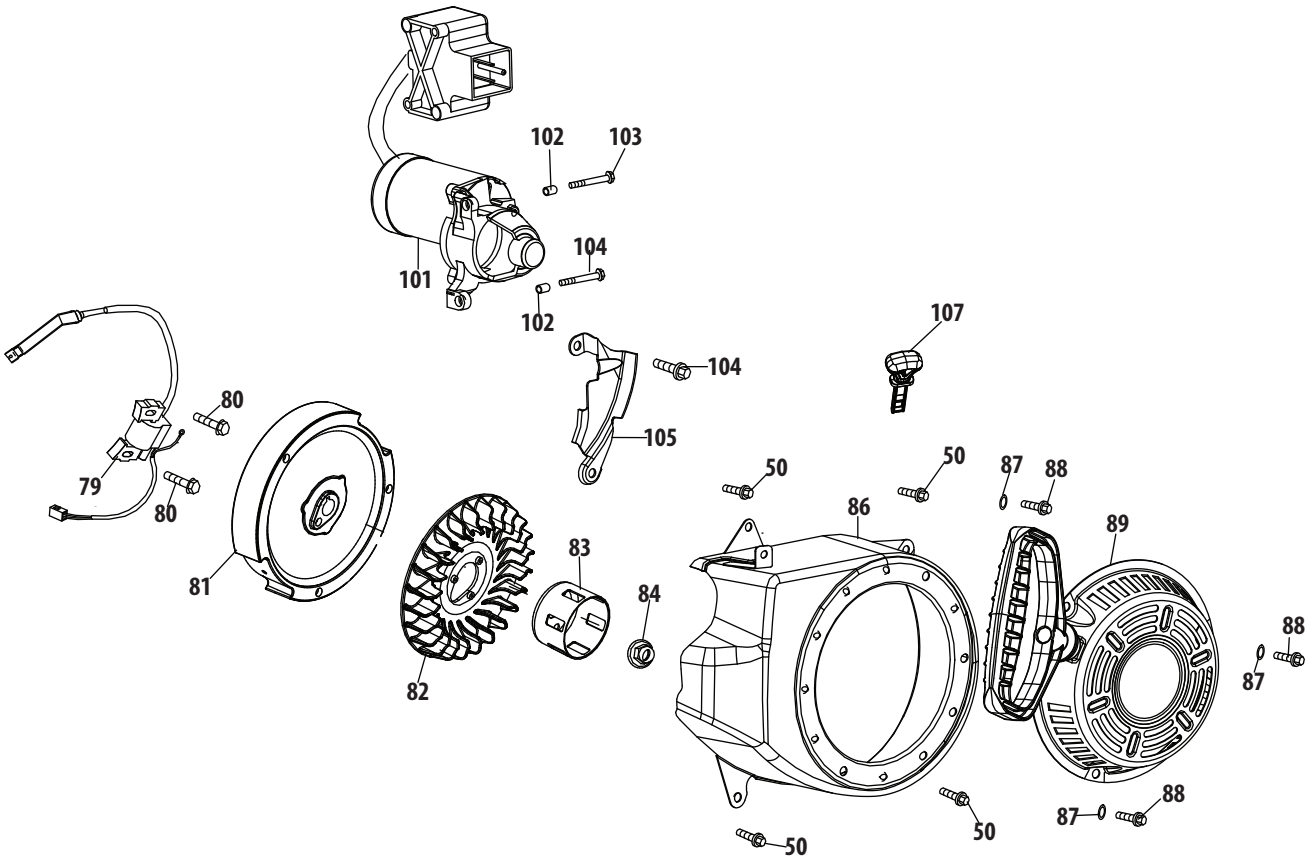

Ref.	Part Number	Description
50	710-04915	Bolt M6×12
79	951-12013	Ignition Coil Assembly
80	710-04919	Bolt M6×25
81	951-12416	Flywheel
82	951-10909	Fan, Cooling
83	951-10911	Pulley, Starter
84	712-04209	Nut, Special, M14×1.5
86	751-12644	Blower Housing
87	736-04455	Gasket 6
88	710-04974	Bolt M6×10

Ref.	Part Number	Description
89	951-12015	Recoil Starter
89	731-05696	Recoil Starter Handle
101	951-10645A	Startup Electromotor
102	715-04088	Dowel Pin 8×8
103	710-05182	Bolt M6×32
104	710-04979	Bolt M6×18
105	951-11109	Blower Housing Shield
107	731-05632	Key
107	951-10637	Key Switch

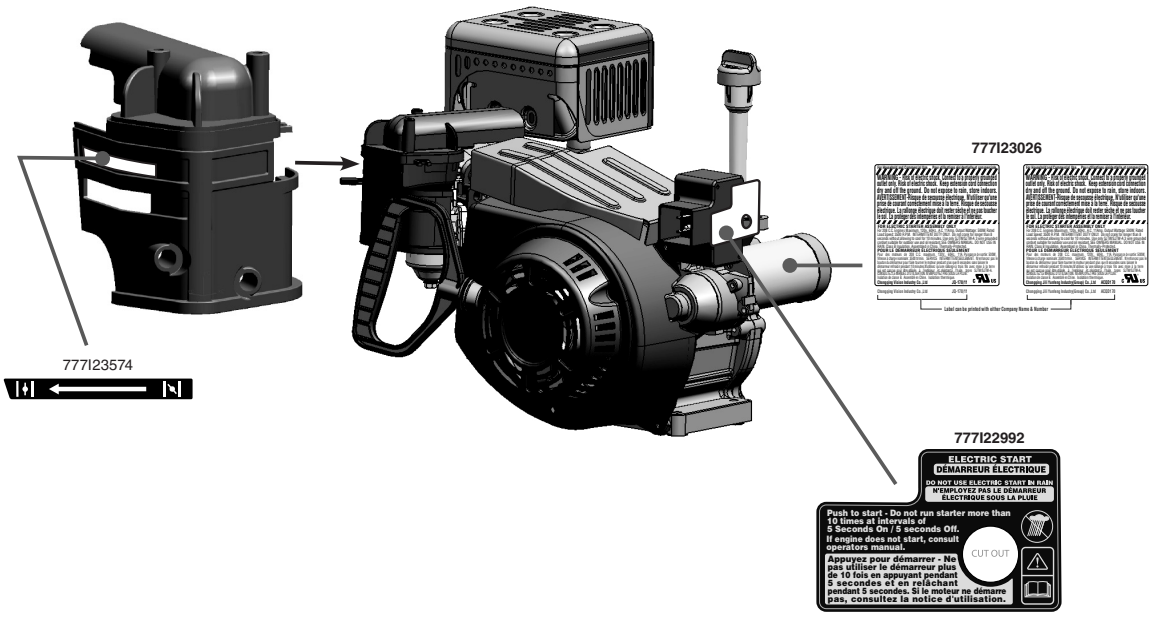
777I23574
777I23026
777I22992
ELECTRIC START
DÉMARREUR ELECTRIQUE
DO NOT USE ELECTRIC START IN RAIN
N'EMPLOYEZ PAS LE DÉMARREUR ELECTRIQUE SOUS LA PLUIE
Push to start - Do not run starter more than 10 times at intervals of 5 Seconds On / 5 seconds Off.
If engine does not start, consult operators manual.
Appuyez pour démarrer - Ne pas utiliser le démarreur plus de 10 fois en appuyant pendant 5 secondes et en relâchant pendant 5 secondes. Si le moteur ne démarre pas, consultez la notice d'utilisation.
CUT OUT

To order replacement parts or locate your nearest service dealer call a Customer Support at (800) 800-7310.
or visit www.mtdproducts.com to find the nearest authorized dealer in your area.

MTD LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019